

## 1. Specification

### Sensing Input ( 0V、 110V ) Avg. reading

Voltage 85 □ 140 Vac single phase, 2-wire  
Frequency 50/60 Hz (DIP switch setting)

### Excitation Output ( E+、 E- )

120V single-phase Continuous 63 Vdc 3.5A  
Max. 110 Vdc 5A 10Sec  
Resistance Min.18Ω、 Max.100Ω  
Fuse Spec. 5 x 20mm 8A (slow blow)

### External Voltage Adjustment( 1KΩ )

Max.+/- 14% @ 1 KΩ 1 watt potentiometer

### Build Up Voltage

Residual voltage at AVR terminal > 5 VAC, 25Hz

### Soft start ramp time

3 secs +/- 10%

### Voltage Regulation

Less than +/- 0.5% (with 4% engine governing)

### Response Time

Less than 20 milliseconds

### EMI Suppression

Internal electromagnetic interference filtering

### Static Power Dissipation

Max. 8 watts

### Under Frequency Protection(Dip switch setting)

50 Hz system knee point at 48 Hz  
60 Hz system knee point at 58 Hz

### Over Excitation Protection

Excitation Current 5 A +/- 10 %

### Voltage Thermal Drift

-40 to +70 °C, less than 3%

### Under Frequency Knee Point Thermal Drift

-40 to +70 °C, less than +/- 0.1 Hz

### Environment

Operation Temperature -40 to +70 °C

Storage Temperature -40 to +85 °C

Relative Humidity < 95%


Vibration 5.5Gs @ 60Hz


### Dimensions

140.0 (L) x 81.0 (W) x 46.0 (H) mm

5.51 (L) x 3.19 (W) x 1.81 (H) inch

## SECTION 2 : APPEARANCE / DIMENSIONS / INSTALLATION DRAWING

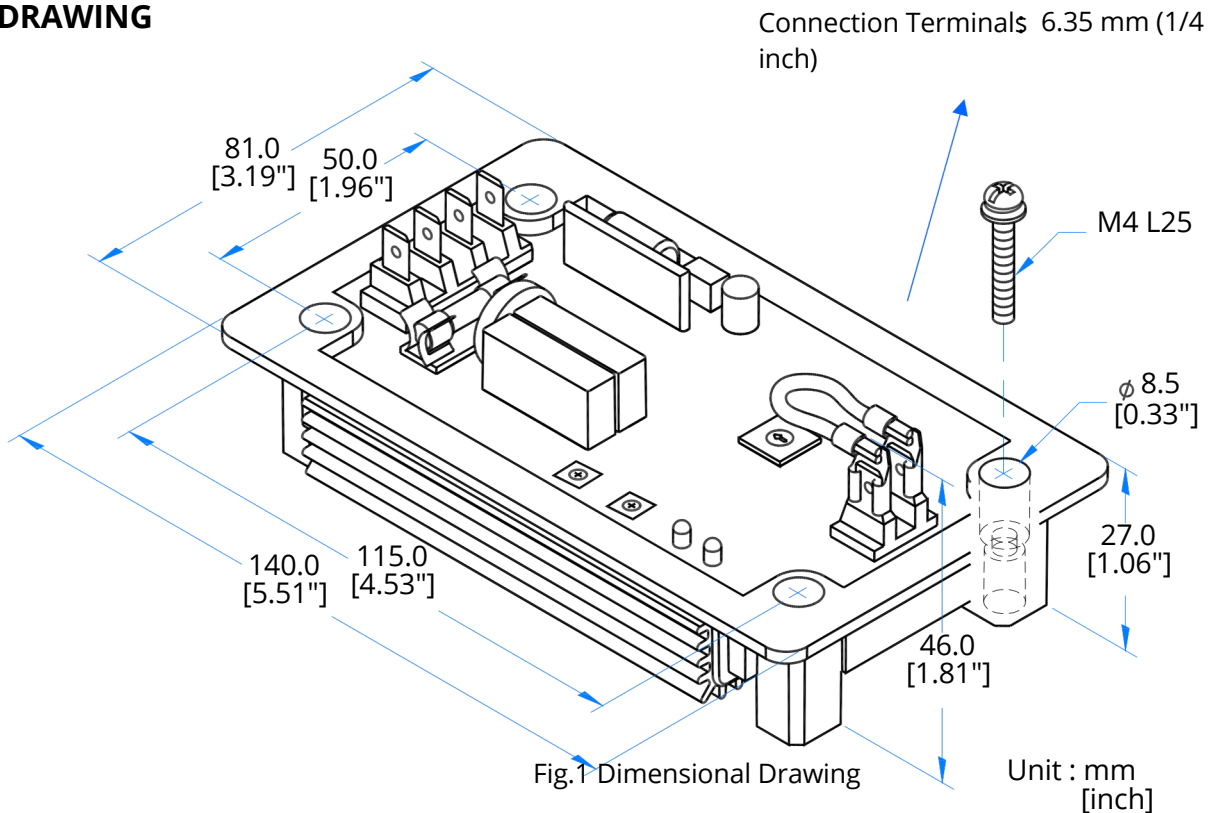

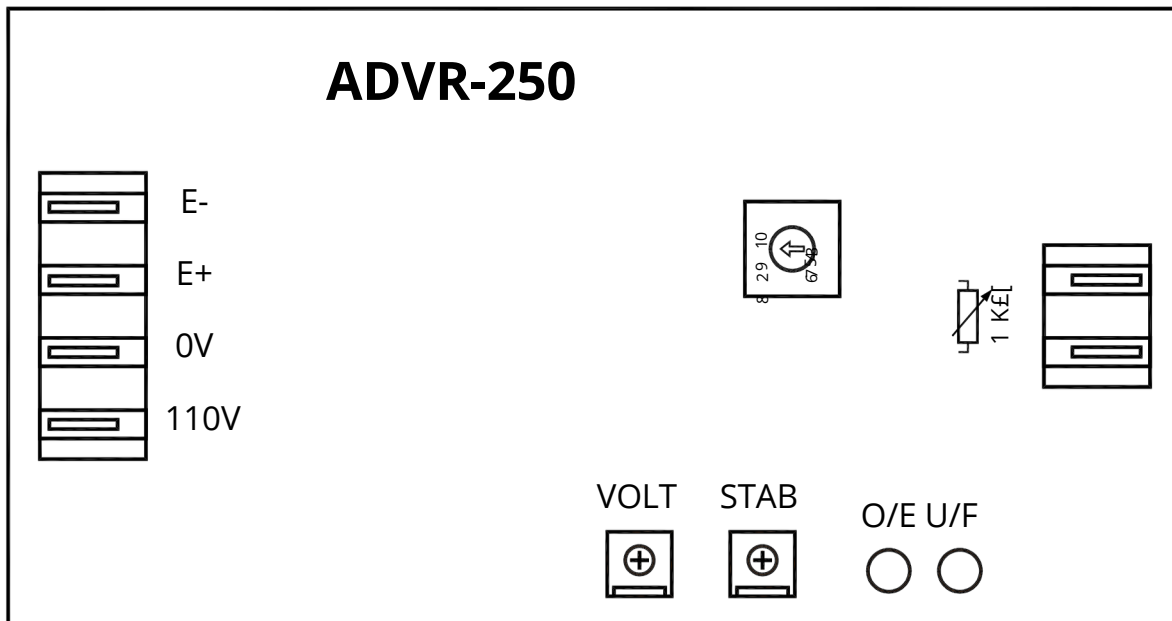

**0V 110V : Power Supply and Sensing Input**

**E+ E-: Excitation Output**

**VOLT : Voltage Adjustment**

**STAB : Stability Adjustment**

**O/E : Over Current Protection Indicator Lamp**

**When over current protection is operating (Excitation Current >5A), this lamp will light**


**U/F : Under Frequency Protection Indicator Lamp**

**(1KΩ) : External VR input, Must be shorted with a jumper when not in use.**

**Under Frequency Protection Selection Switch :**

## SECTION 5 U/F protection & LAM function selection

The U/F Protection function and LAM function are selected by a switch setting.

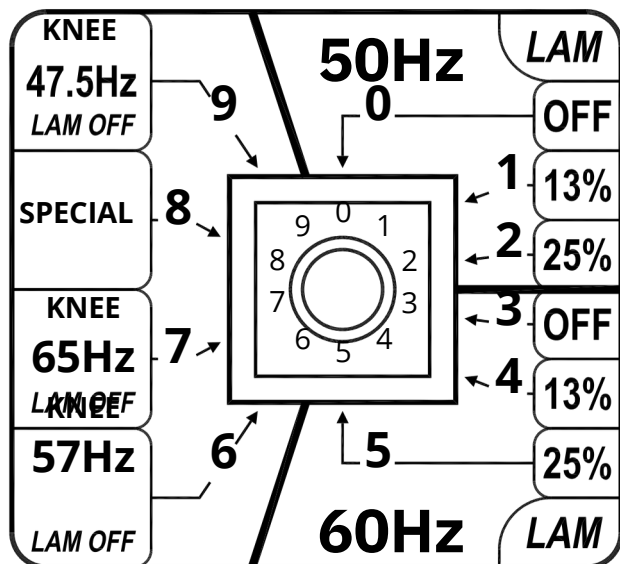

### Warning!!

The switch setting must correspond to the rated frequency. An error in settings could cause damage to the generator.

rated generator capacity.

1: Under Frequency knee point 48Hz, LAM function set to (13%), Use when transient loads are between 40%~70% of rated generator capacity.

2: Under Frequency knee point 48Hz, LAM function set to (25%). Use when transient loads are greater than 70% of rated generator capacity.

### 60Hz Systems

3: Under Frequency knee point 58Hz, LAM function "OFF". Use when transient loads are below 40% of rated generator capacity.

4: Under Frequency knee point 58Hz, LAM function set to (13%), Use when transient loads are between 40%~70% of rated generator capacity.

5: Under Frequency knee point 58Hz, LAM function set to (25%). Use when transient loads are greater than 70% of rated generator capacity.

### Special Systems

6: Under frequency knee point 57Hz, LAM function "OFF". Under a load, engine speed variations can be greater than 2Hz



7: Under frequency knee point 65Hz, LAM function "OFF"

8: Factory setting of the Under Frequency knee point is 48Hz and LAM function "OFF". This option is supplied for special projects, which must be ordered separately and are set at the factory.

9: Under frequency knee point 47.5Hz, LAM function "OFF". Under a load, engine speed variations can be greater than 2Hz.

**50Hz Systems** 0: Under Frequency knee point 48Hz, LAM function "OFF". Use when transient loads are below 40% of

## SECTION 4. Connection Diagrams

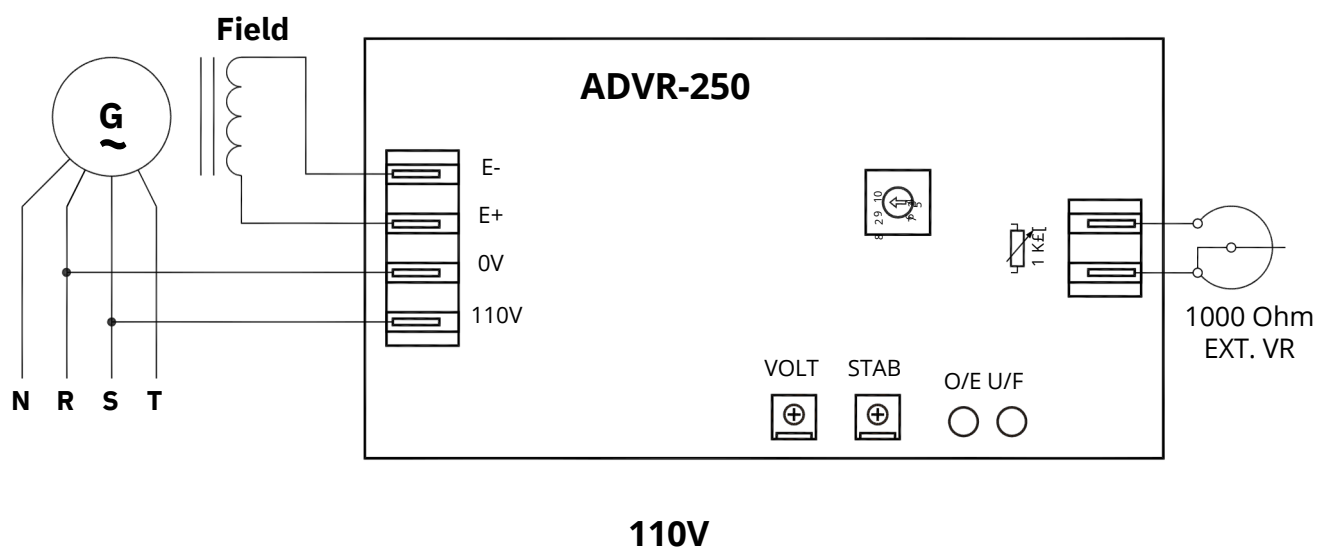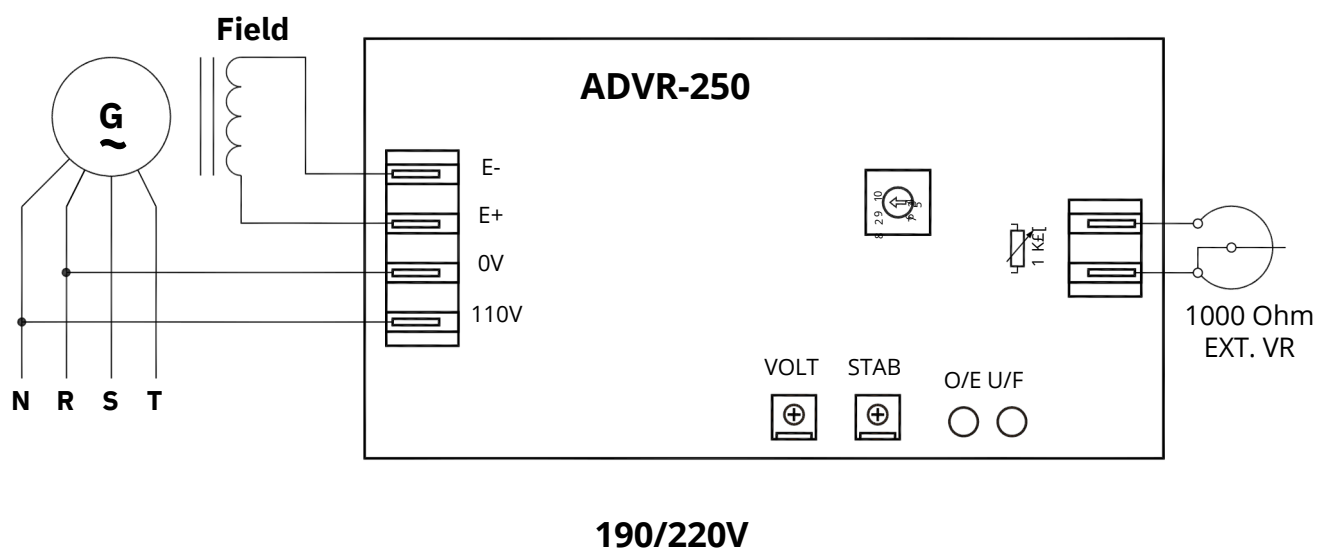

※ Use only original supplied spare protection fuses as replacements.

※ Please accept our apologies if any modifications in performance, specification or appearance are made without prior notice.

### Warning!!

**Before using a Megger or a Withstand Voltage Tester, removes the wires connecting to the AVR to prevent high voltage damage to the regulator.**